

Pulsed laser diode illuminator (QD-Qxy10-IL)

Laser solutions by LUMIBIRD

Packaged short-pulse illuminator



MAIN FEATURES

- mJ CLASS NIR LASER DIODE ILLUMINATOR
- SUPERGAUSSIAN TEMPORAL PULSE SHAPE
 - 30 to 100 ns (FWHM)
- PULSE REPETITION RATE UP TO 6 kHz
- HIGH ELECTRICAL-TO-OPTICAL EFFICIENCY ~ 25%
 - High efficiency diode bars
 - High efficiency current pulse generator
- UP TO 1W AVERAGE POWER WITH NATURAL CONVECTION SUCH AS:
 - 1 mJ pulse energy at 1 kHz
 - 2 mJ pulse energy at 500 Hz
- FAST AXIS COLLIMATION
- 24 VDC LOW POWER CONSUMPTION
- USER-ADJUSTABLE
 - 5 or 10 mm emission width
 - Standard wavelengths : 808, 915, 940 or 980 nm
- ROBUST DESIGN
 - High reliability (> 100 x 10⁹ shots)
 - Shock and vibration resistant
 - Qualified for defense and space applications

APPLICATIONS

- PHOTOACOUSTICS
- NIR SPECTROSCOPY
- ULTRASOUND GENERATION
- 3D FLASH LIDAR
- TIME OF FLIGHT

MARKETS

- MEDICAL
- AUTOMOTIVE
- CIVIL ENGINEERING
- SECURITY
- DEFENSE & SPACE
- AEROSPACE

OPTIONS

- EXTERNAL POWER SUPPLY
- TEC COOLING & FAN / WATER COOLING
- OTHER WAVELENGTHS WITH LESS ENERGY: 635 nm / 760 nm / 1.55 μm

OUTPUT ENERGY AT 25°C

PULSE WIDTH	EMISSION WIDTH	MAXIMUM FREQUENCY	OUTPUT ENERGY
100 ns	10 mm	1 kHz	4 mJ
90 ns			3.5 mJ
80 ns			3 mJ
70 ns	5 mm	2 kHz	2.75 mJ
60 ns			2.5 mJ
50 ns		3 kHz	2 mJ
40 ns		4 kHz	1.5 mJ
30 ns		6 kHz	1 mJ

Energy can be adjusted from 10% to 100% by external 0-5 VDC power supply.

OTHER SPECIFICATIONS

PARAMETERS	UNIT	5-mm WIDTH	10-mm WIDTH
STACK CHARACTERISTICS			
Number of diode bars			Up to 10
Bar-to-bar pitch	μm		500
BEAM CHARACTERISTICS			
Spot width in SA ⁽¹⁾ (FWHM)	mm	5	10
Slow axis divergence (FWHM)	deg		< 11
Spot height in FA ⁽¹⁾ (FWHM)	mm		5
Fast axis divergence with FAC ⁽²⁾ (FWHM)	deg		< 3
FAC lenses to output window distance	mm		4
Wavelength at 25°C ⁽³⁾	nm	808, 915, 940 or 980 (± 5 Typ.)	
Spectral width	nm		< 10
Polarization			TE mode

PARAMETERS	CONNECTOR MODEL	5-mm WIDTH	10-mm WIDTH
ELECTRICAL REQUIREMENTS			
General voltage DC power supply	LUMBERG (RSDF 4/0.2 M)	24 VDC / < 2 A	
Energy adjustment voltage supply ⁽⁴⁾		0-5 VDC / < 0.2 A	
Temperature sensor ⁽⁵⁾	LUMBERG (RSDF 4/0.2 M)	PT1000	
Trigger signal	SMA Jack/Female	Pulse mode, 5 V TTL, 1 ≤ width ≤ 3 μs Frequency up to 6 kHz	

PARAMETERS	UNIT	5-mm WIDTH	10-mm WIDTH
OPERATING CONDITIONS			
Operating temperature	°C	+ 15 to + 40	
Storage temperature	°C	- 20 to + 80	
Humidity		Non condensing for humidity rate lower than 70 %	
Lifetime at maximum energy		> 100 x 10 ⁹ shots	

(1) SA : Slow axis, FA : Fast axis


(2) FAC : Fast axis collimation

(3) Variation of wavelength with temperature is approximately 0.3 nm/°C.

(4) Without any DC voltage (0-5 VDC), the output energy is maximum. When applying DC voltage between 0 and 5VDC to adjust the output energy, the pulse width will decrease as well as the output energy (at 10% of maximum energy, pulse duration will be reduced by 50 %).

(5) A temperature sensor is included and fixed onto the laser diode base. Laser diode temperature can be monitored via a LUMBERG connector.

DIMENSIONS

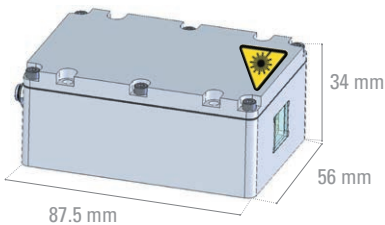

DRAWINGS: PIMK 10690



Many options and configurations are available. Please contact Lumibird to find the best match for your needs and compatibility between options.



Lumibird has locations across the globe that are available to provide support for any product, service or inquiry.

Visit www.lumibird.com to connect with any of our global sites.

